

Service Support Spirit

How to connect Aricut60B Plasma with Spark


→ The Plasma connect to SPARK , only 1 cable need to be connected.

→ SPARK connect terminal:

✳ Refer to the following Picture when connecting the Aricut60B CNC controller with cable.



→

	Name:OK/ST	PLUG-6 cores.	
Spark connect terminal		START	The CNC plasma arc initiation signal
		START	
		Feedback-1	The CNC feedback signal
		Feedback-2-	

→ **Aricut60B** Plasma connect terminal:



Arc Start/Feedback



6 Pin Plug

1	Arc Start
2	Arc Start
3	Feedback-1
4	Feedback-2

Service Support Spirit

→ Plasma torch has three positions to install, As picture



→ Ground wire connect position



Service Support Spirit

→ Power connection for plasma power supply.



→ Connection of plasma and air pump.

